



SHOCKER XLS
ASA/FRAME LEAK GUIDE

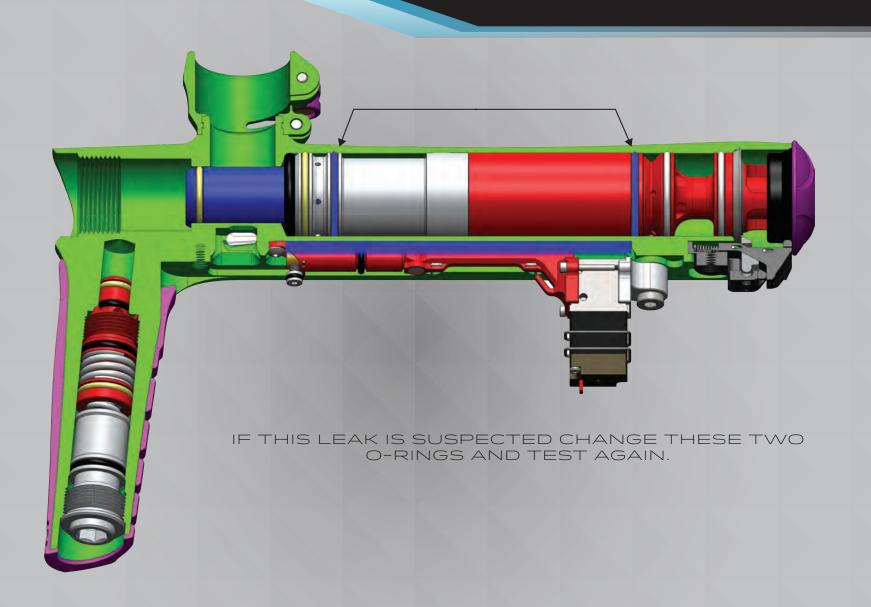

SHOCKER XLS

BODY CHANNEL LEAK GUIDE

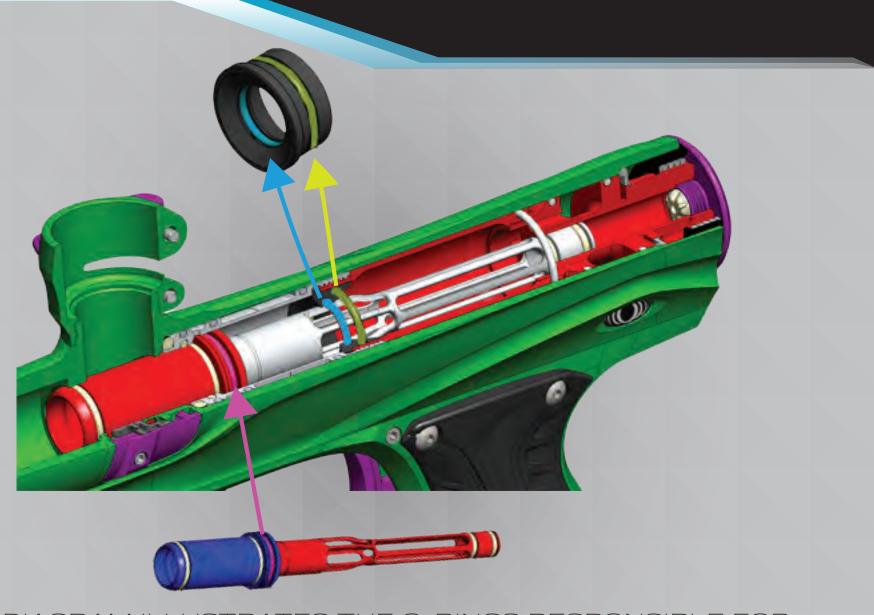


THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING FROM INSIDE THE FACE OF THE BOLT.

SHOCKER XLS DOWN BARREL LEAK GUIDE



THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING AROUND THE OUTSIDE OF THE BOLD FACE.


SHOCKER XLS DOWN BARREL LEAK GUIDE

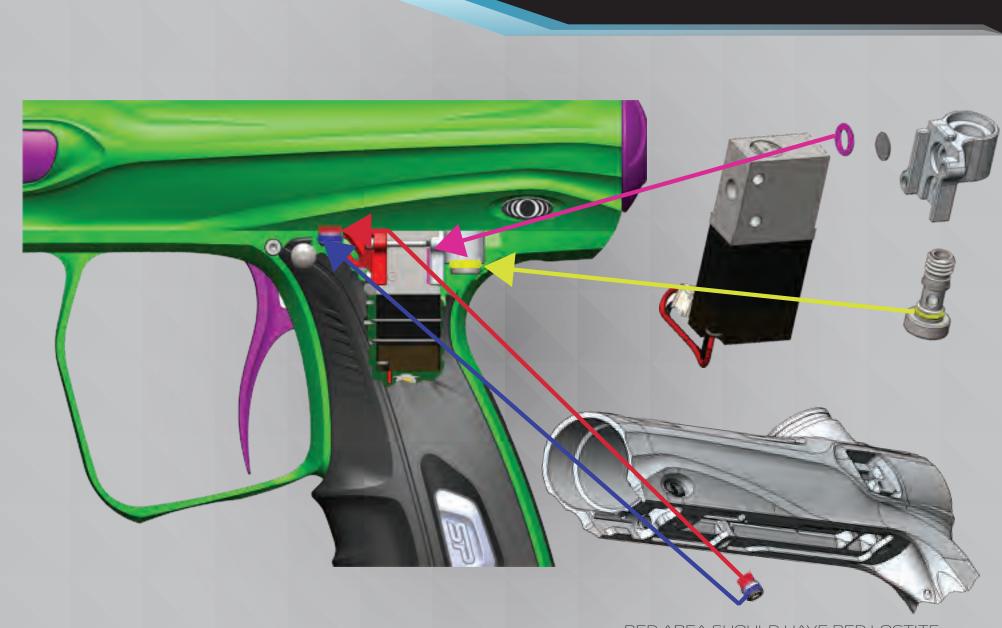

RED AREA SHOULD HAVE RED LOCTITE

SHOCKER XLS

GRIP FRAME AREA LEAK GUIDE

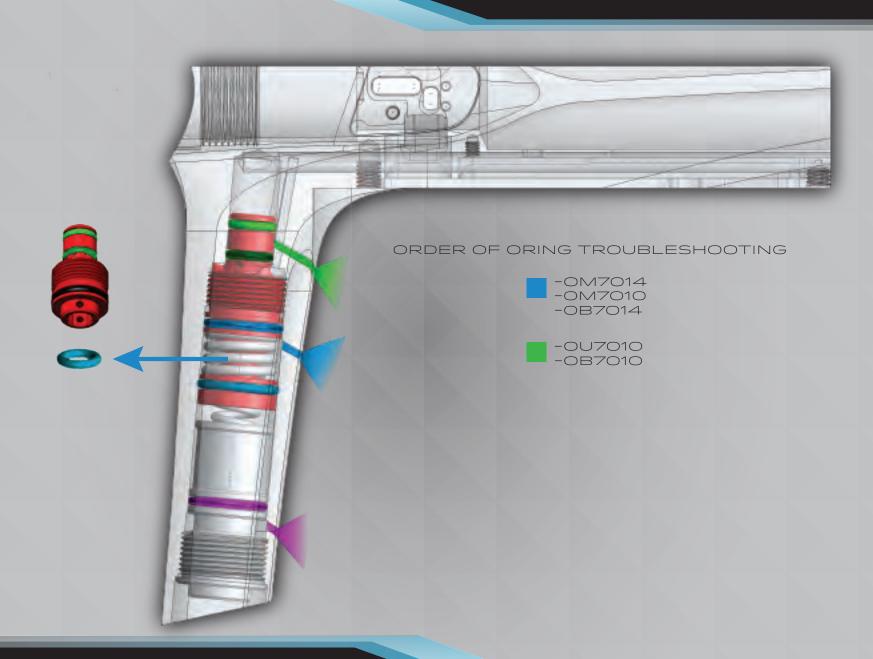

SHOCKER XLS
REGULATOR LEAK GUIDE