



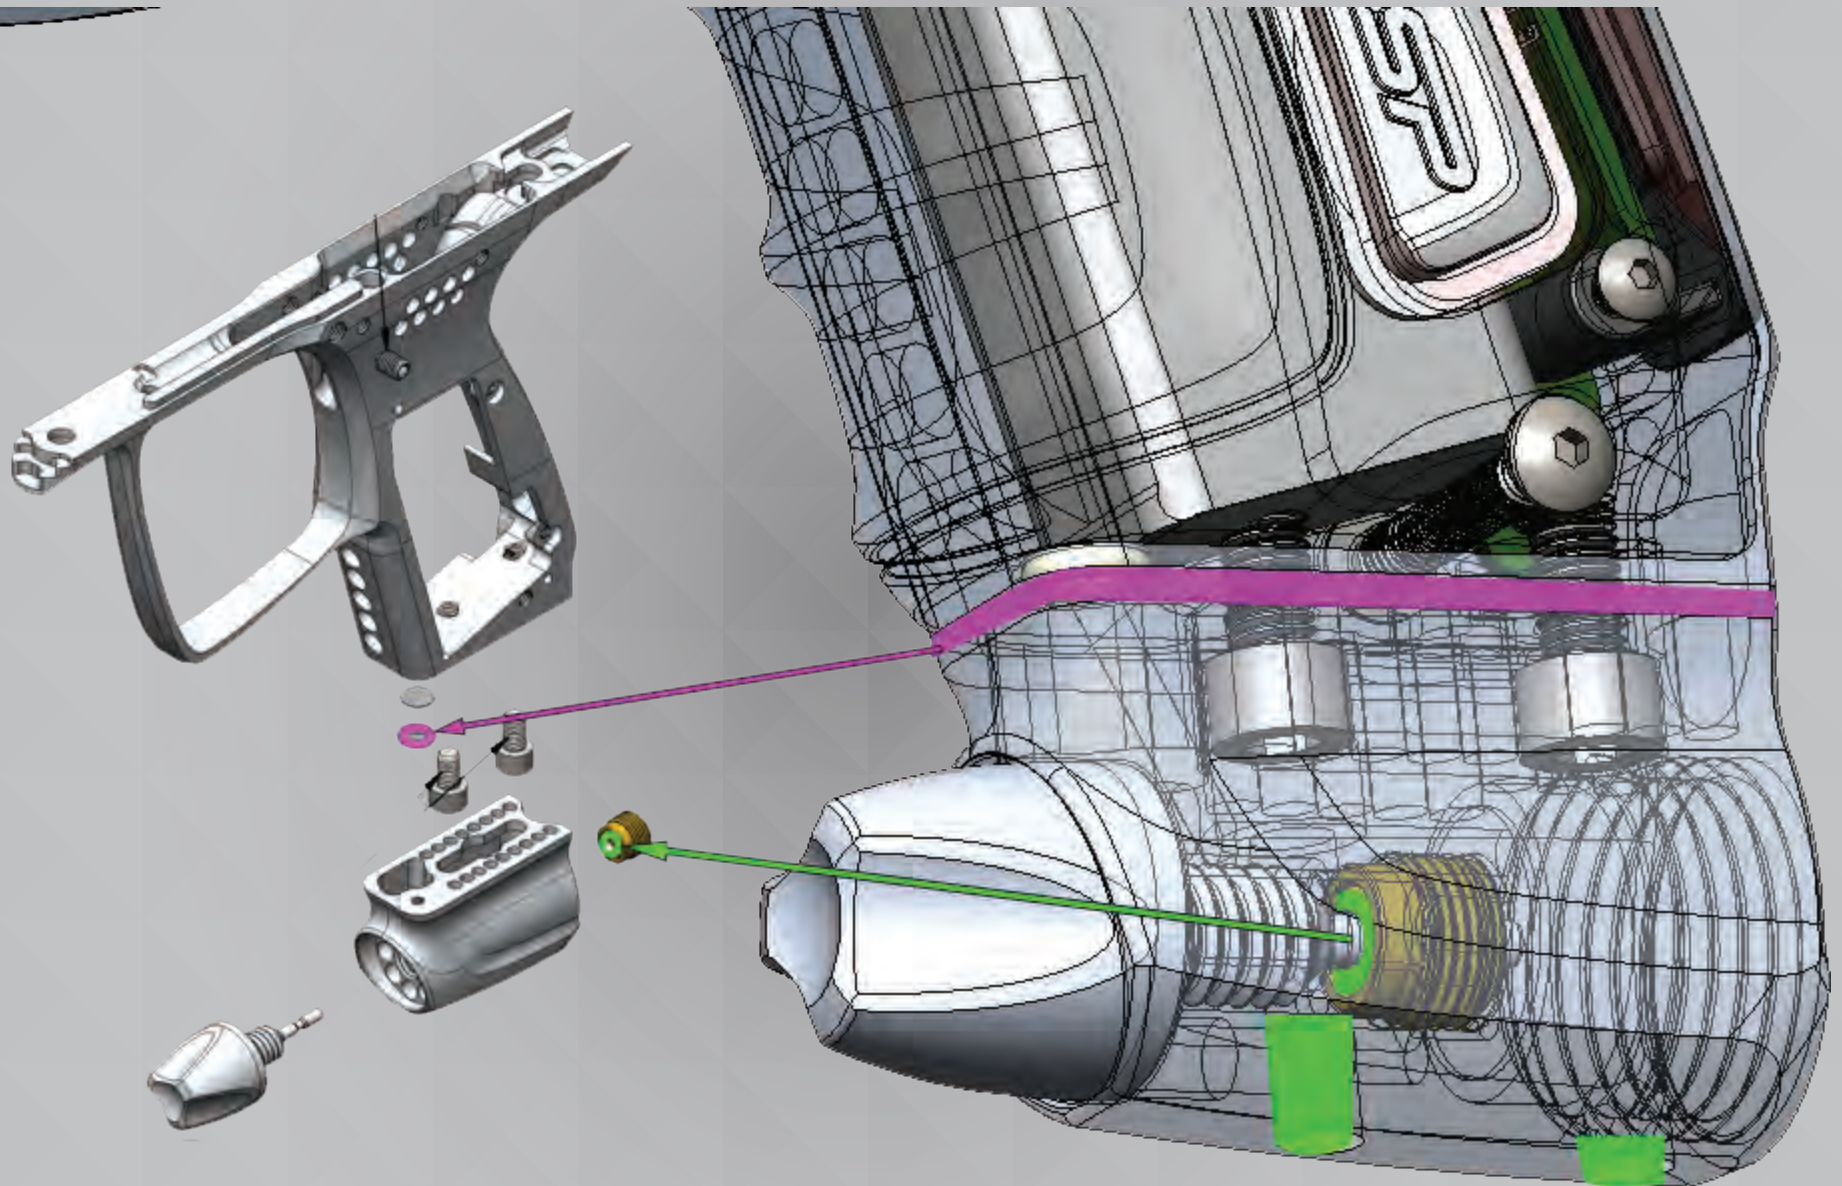

SHOCKER RSX
ASA/FRAME LEAK GUIDE

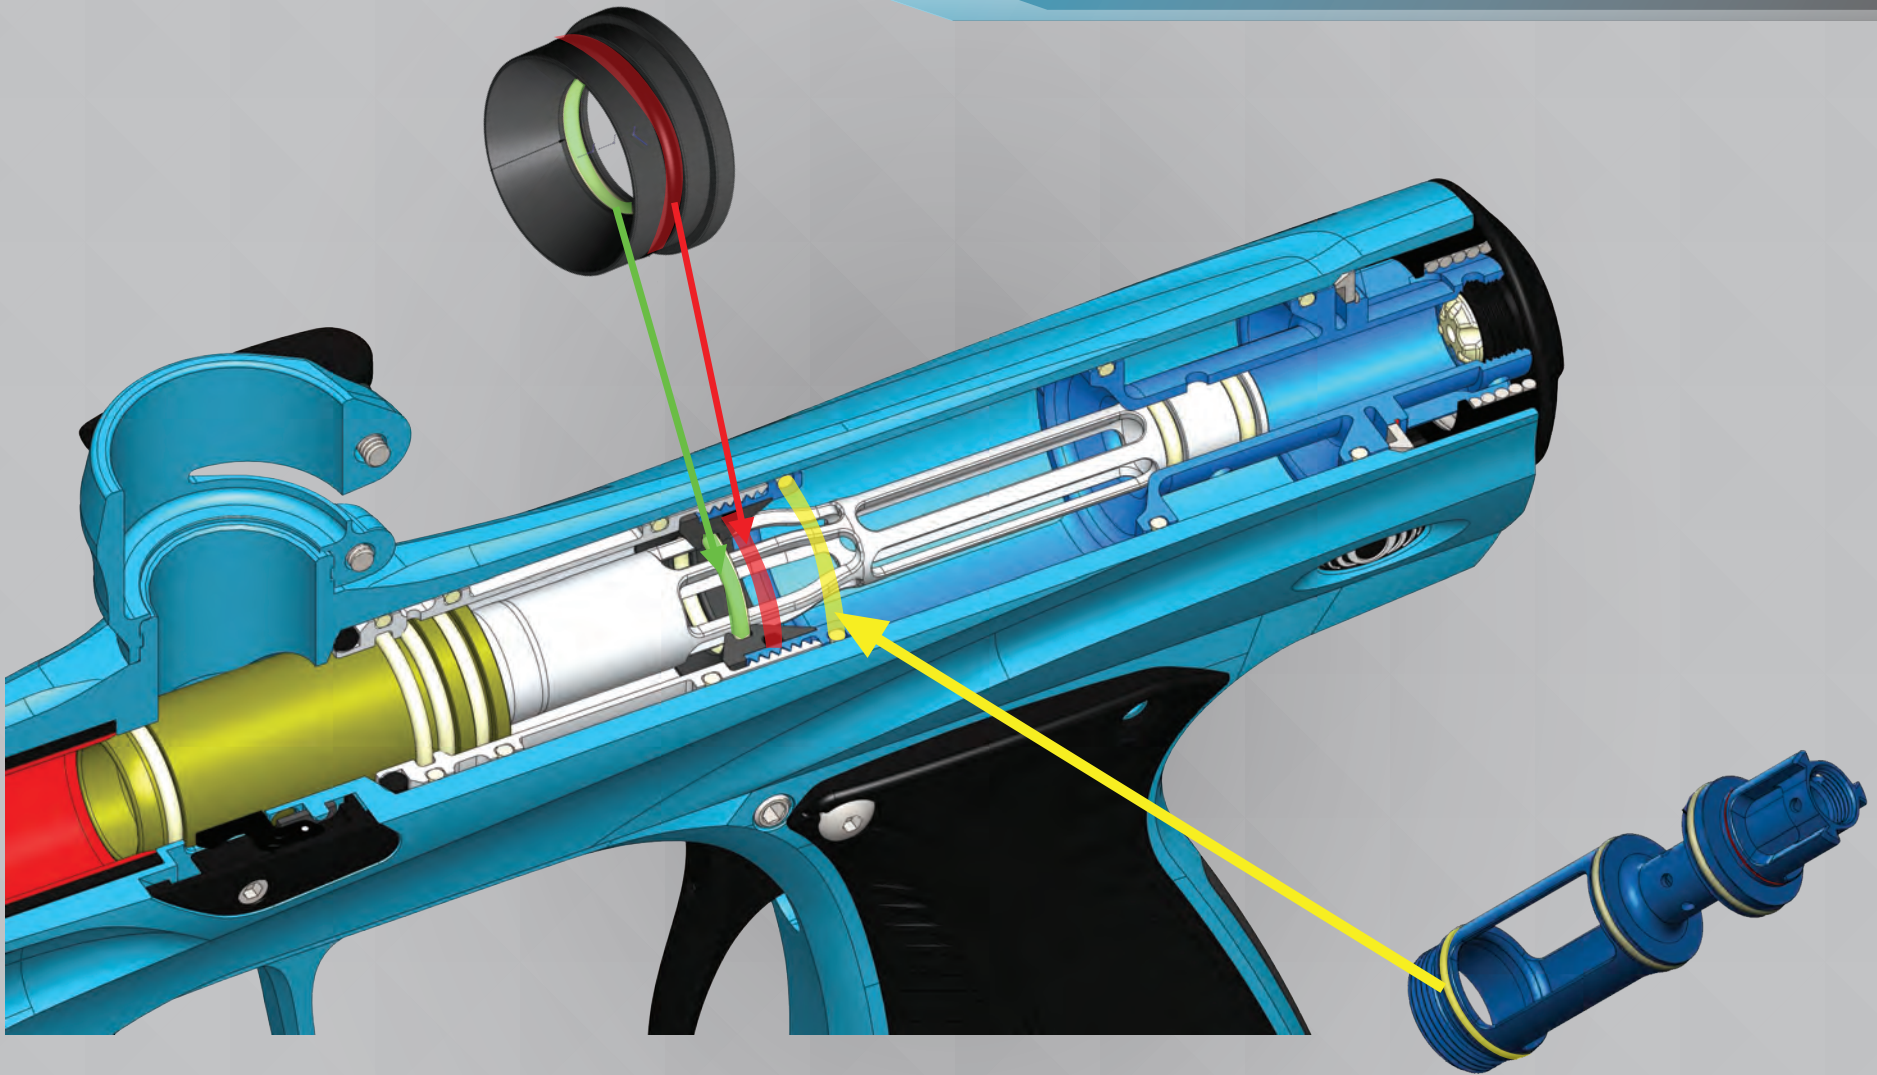


THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING AROUND THE OUTSIDE OF THE BOLT FACE.






THIS DIAGRAM ILLUSTRATES THE O-RINGS RESPONSIBLE FOR AIR LEAKING FROM INSIDE THE FACE OF THE BOLT.

SHOCKER RSX
DOWN BARREL LEAK GUIDE

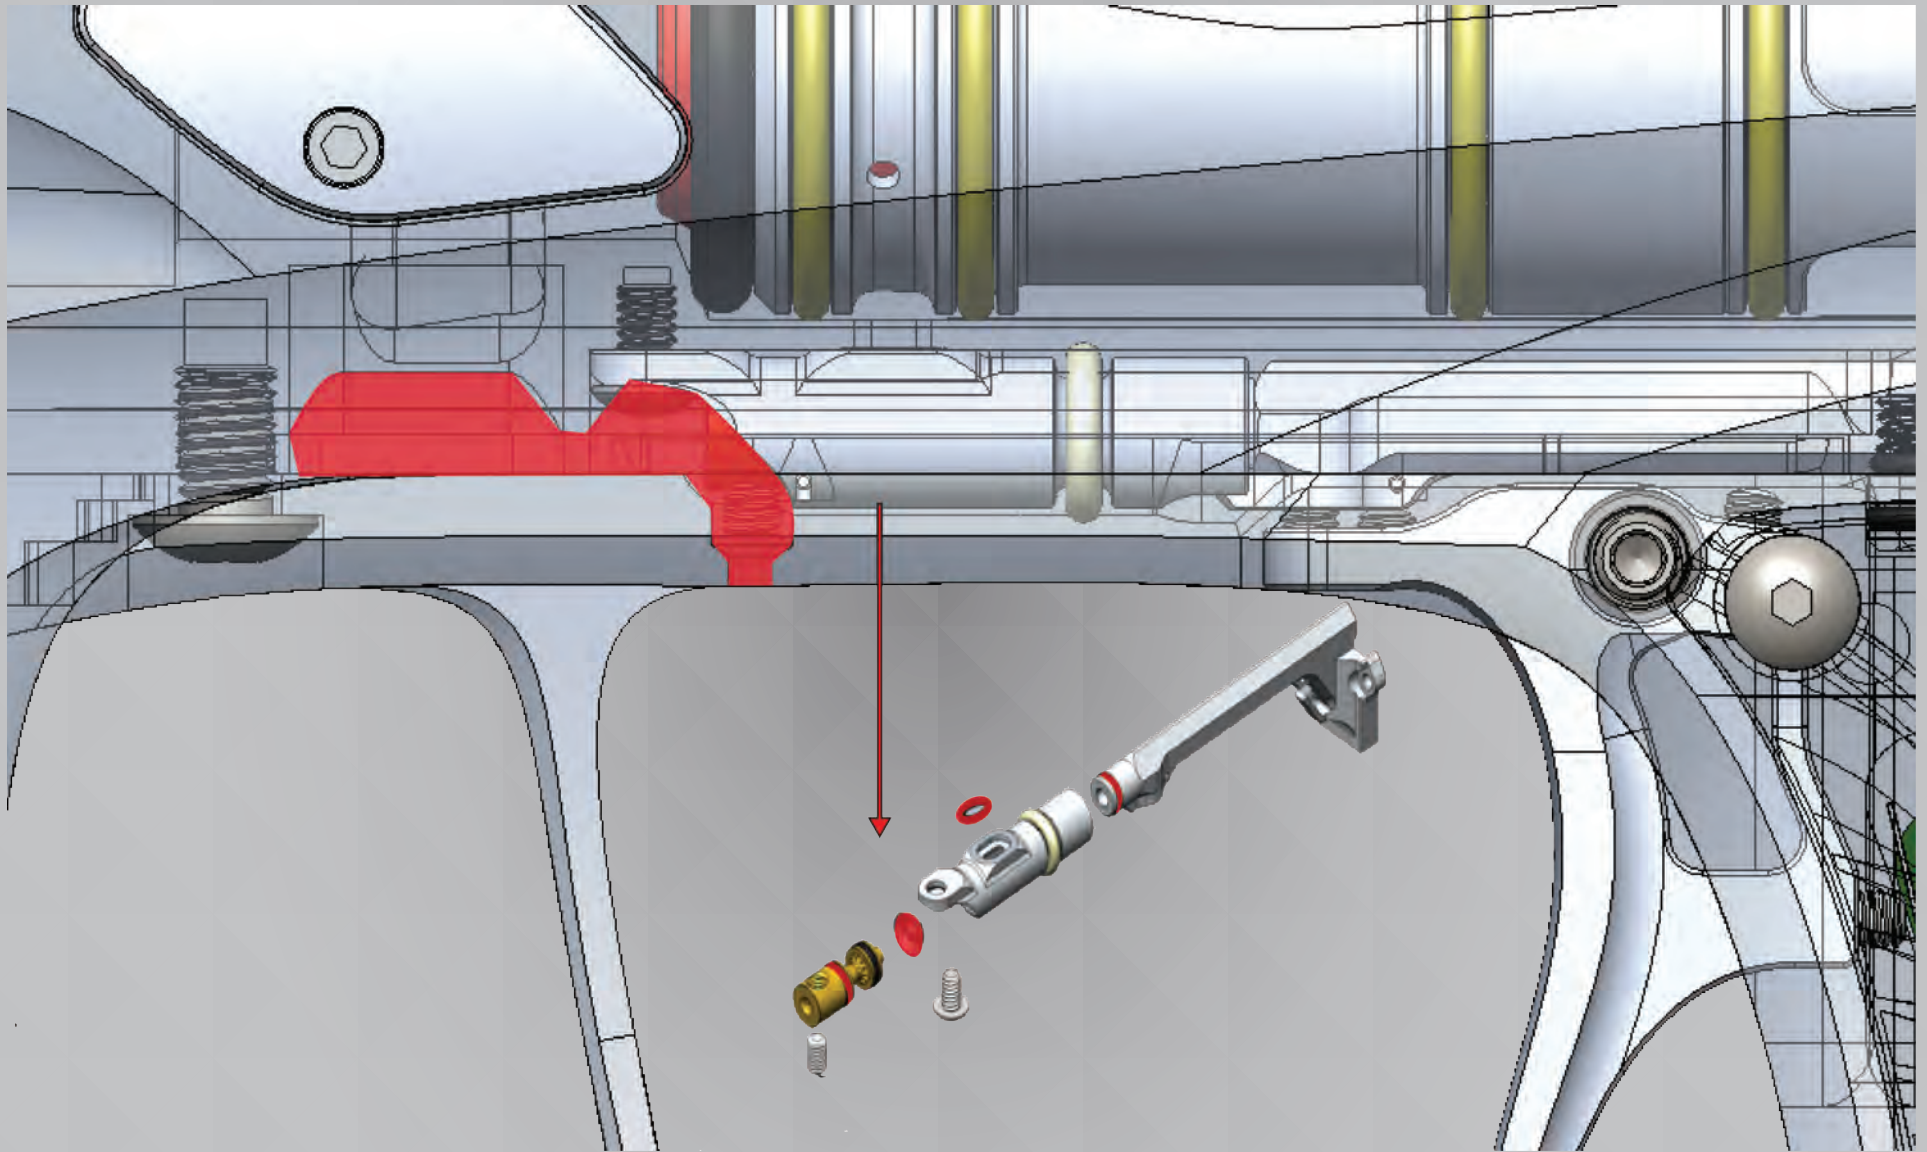

SHOCKER RSX
FORWARD FRAME LEAK GUIDE

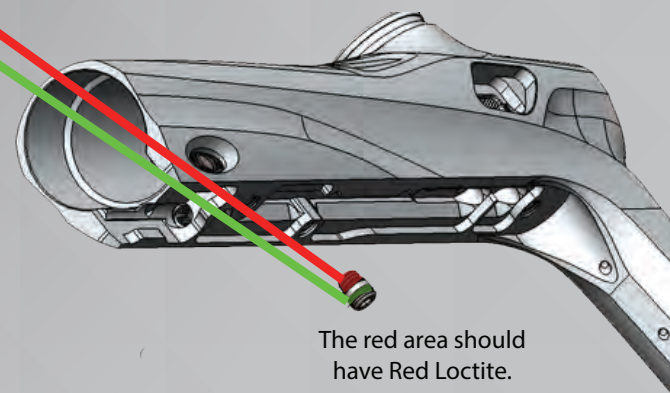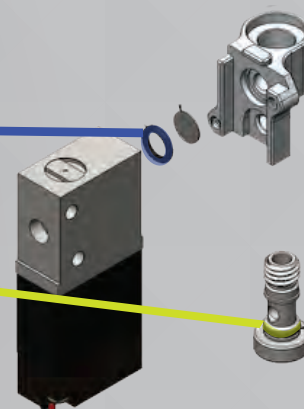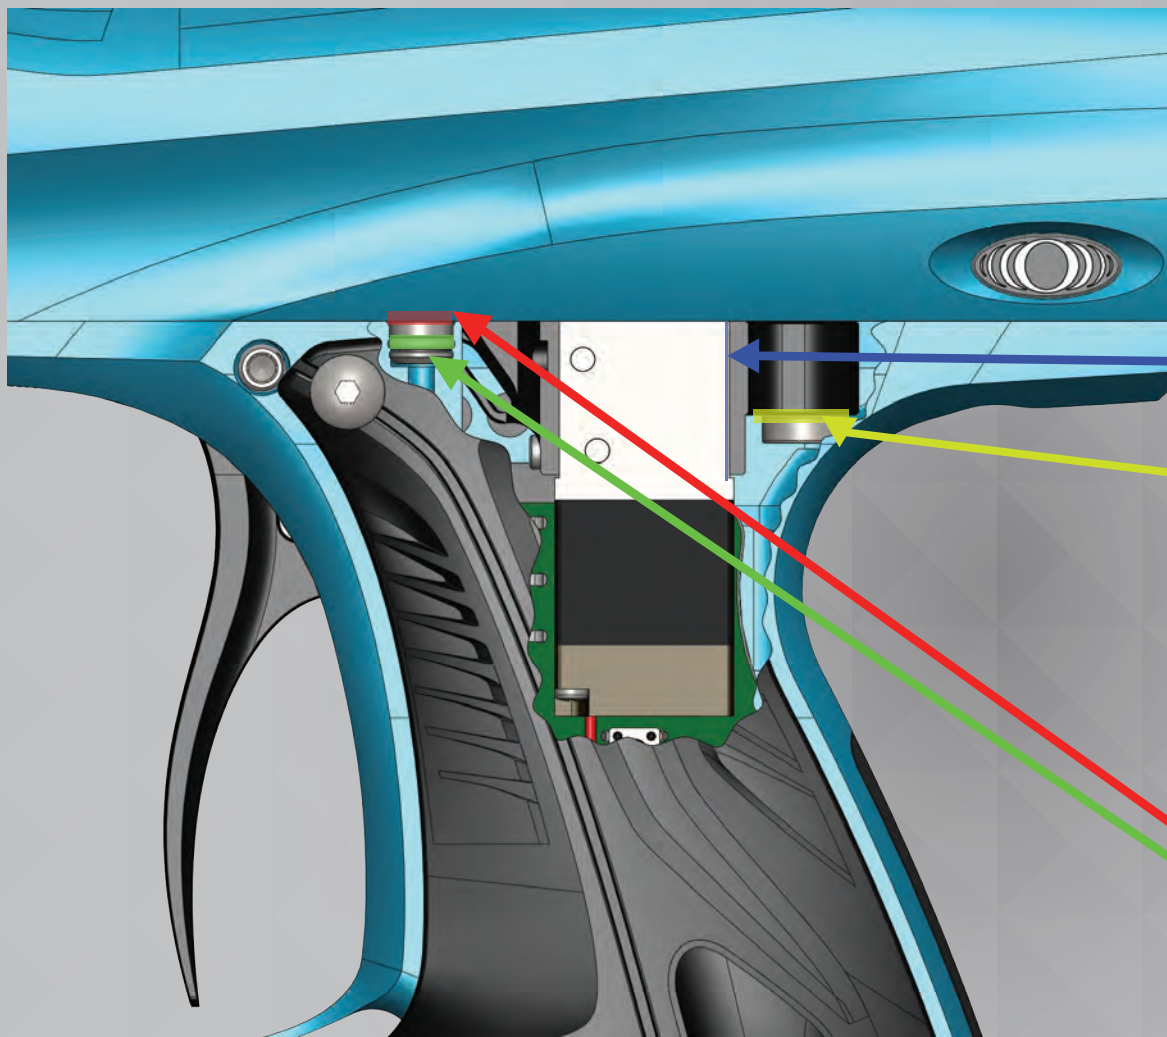

The red area should have Red Loctite.

SHOCKER RSX
GRIP FRAME AREA LEAK



IN ORDER OF LIKELYHOOD


- O-RING - OMB020
- O-RING - OB7M14
- O-RING - OB7D18
- SET SCREW - RE-LOCTITE



Tech Tip: To confirm the leak is coming from the pictured vent hole, plug the hole with a small amount of grease then air up the marker - if the grease is blown out, then you have confirmed the leak location.

SHOCKER RSX

FIRING CAN/ REAR BODY LEAK GUIDE

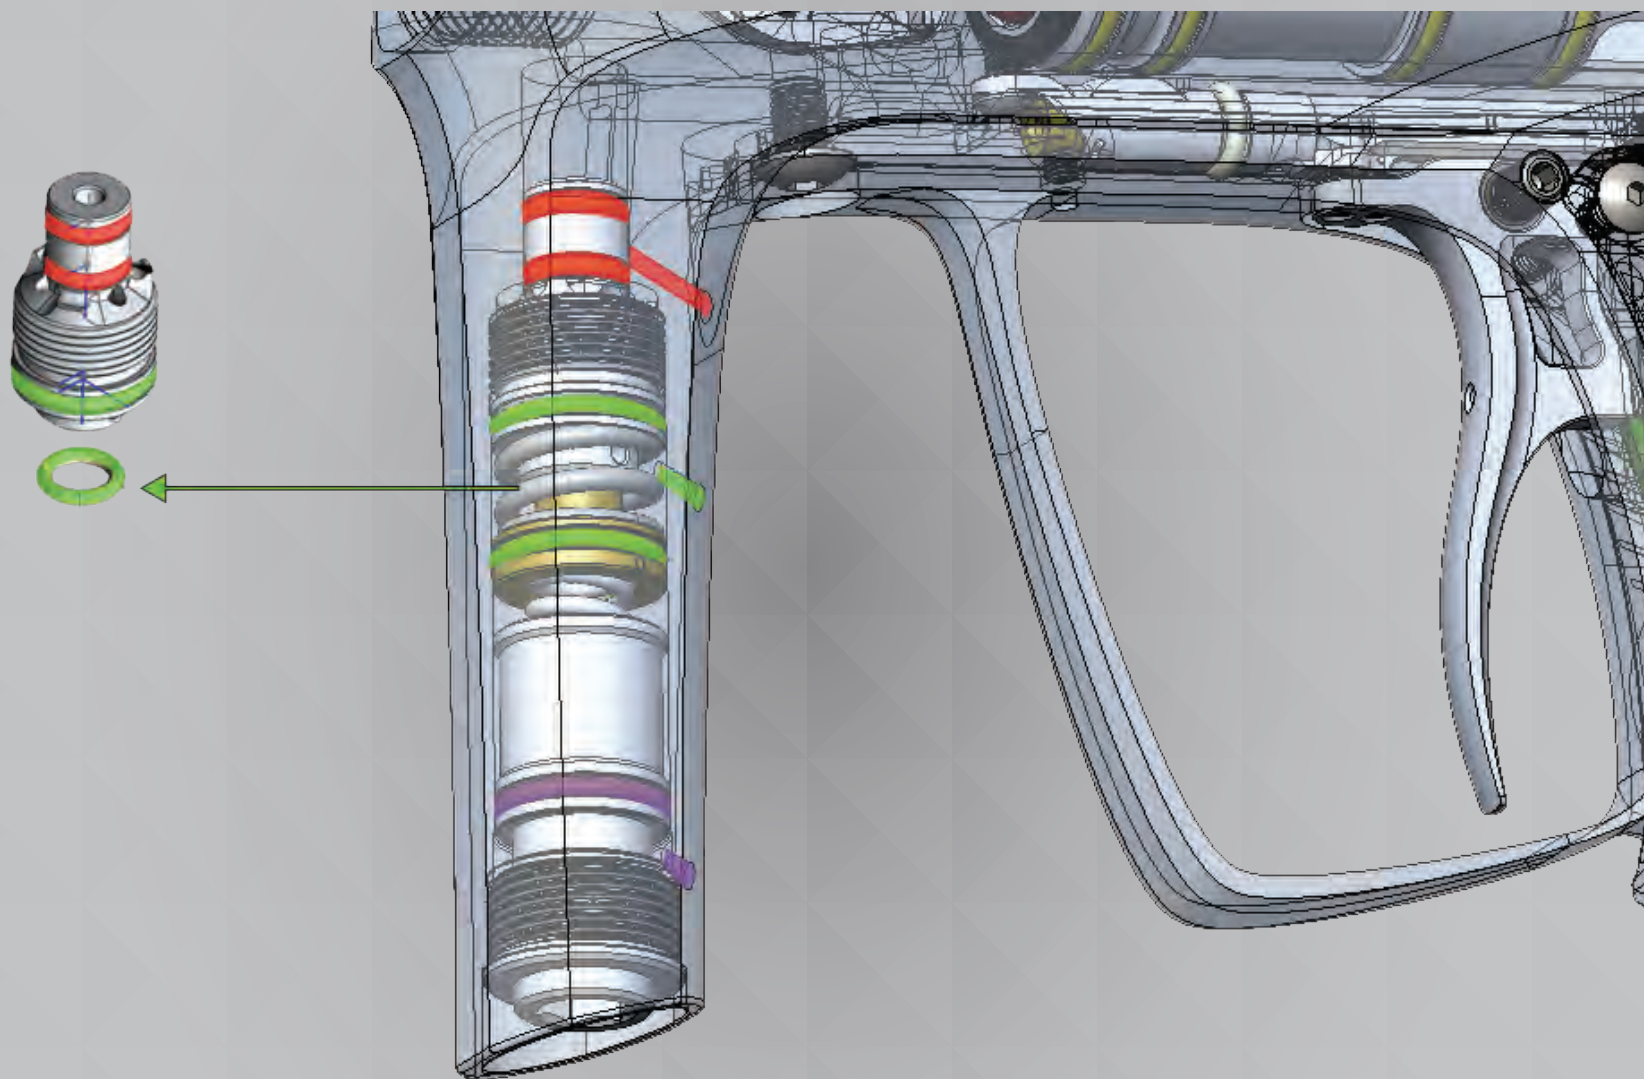

SHOCKER RSX
REGULATOR LEAK GUIDE